


# WASHING MACHINE CTD 1208

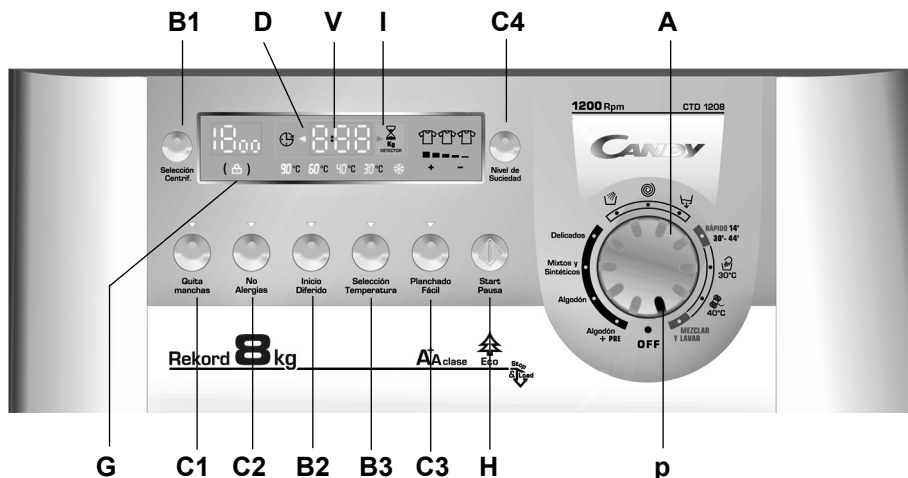

## A PROGRAMME SELECTOR

Use this control to select the desired wash programme. Turn the selector (it can be turned in both directions) so that the programme is opposite the reference indicator (p). The temperature selected will depend on the programme. (See the Programme Table).

**B1 SPIN SPEED SELECTOR** @

**B2 DELAY START** ⌚

**B3 WASH TEMPERATURE** ℹ

**C1 STAIN BUSTER** 🧼

**C2 AQUAPLUS (SENSITIVE KEY)** +💧

**C3 EASY IRON** 📄

**C4 DEGREE OF SOILING** 🧺

**G DOOR - PROGRAMME START LIGHT** 🔒

**H START/STOP KEY**

**I KG. DETECTOR LIGHT**

**D DELAY START LIGHT**

**V "DIGITAL" Display**

The display's indicator system allows you to be constantly informed about the status of the machine

**p CONTROL POSITION INDICATOR**

This washing machine has a device that ensures that the drum is right-side-up and ready for loading/ unloading clothes when the selected programme is completed.

## Programme table mod CTD 1208

programme	programme for	aprox. time min.	max. temp. setting °C	max. spin speed rpm/ min	max. load Kg.	washing powder load			option keys C			
						I 	II 					
 <b>COTTONS</b>	Cotton+ Pre White+prewash	display	90°	1200	8	•	•	•	•	•	•	•
	* Fast coloureds	display	60°	1200	8		•	•	•	•	•	•
 <b>SYNTHETICS</b>	Fast coloureds	display	60°	800	4		•	•		•	•	•
 <b>DELICATES</b>	Delicates	display	40°	600	2,5		•	•			•	
	Hand wash	display	30°	800	1,5		•	•			•	
	Woollens  Gentle	display	40°	800	2		•	•			•	
<b>SPECIAL</b>	Gentle rinse	display		800				•		•	•	
	Gentle spin	display		1200								
	Empty	display		0								
	Mix&Wash	display	40°	1000	8		•	•		•	•	
	Fast	14'	30°	800	1,5		•	•				•
		30'	40°	800	2,5		•	•				•
		44'	40°	800	3,5		•	•				•

\* Programme also recommended for low-temperature washes (lower than the max. shown).

Programme tested in accordance with CENELEC EN 60456 with the maximum Degree of Soiling selected.

## Technical data mod. CTD 1208

Mains voltage	Wash power rating	Spin power rating	Pump motor power rating	Heating element power rating	Max. Power input	Mains fuse Amp. rating	Water pressure	Water consumption *prog. EN60456	Energy consumption *prog. EN60456
220-230V. 50Hz.	175 W.	400 W.	30 W.	1950 W.	2150 W.	10 A.	0,05-0,8 Mpa	56 L.	1,36 Kw.

### IMPORTANT:

- Do not use liquid detergent for programs with a prewash cycle and/or timed start.

### PREPARING THE WASH CYCLE

- Once the washing is loaded, ensure that the drum doors are properly closed..
- Add detergent and additives, not exceeding the maximum level indicator.
  - detergent for pre-wash I
  - detergent for wash programme II
  - fabric conditioner

### SELECTING THE DESIRED PROGRAMMES AND OPTIONS

- Turn the programme selector (A) to the desired programme.
- Alternatively, if you wish, you can use the key **B3** to choose washing temperature.

### B3 wash temperature

When selecting a programme, the recommended wash temperature is automatically indicated, and the corresponding indicator lamp lights up.

It is possible to lower or raise this temperature, by pressing the (B3) button.

**Note: The temperature must be adjusted before selecting DEGREE OF SOILING.**

5.- Press the key or keys for any options desired (C1, C2, C3, C4).

.- It is advisable to select the required options before pressing the Programme Start key (H).

.- Remember that if the programme has already passed the stage at which an option is activated, that option will not be implemented.

### **C1 stain buster key**

When you press this key, the sensors of the new ACTIVA SYSTEM come into operation. These either act on the selected temperature, keeping it constant throughout the washing cycle, or on the mechanical action of the drum. The drum spins at two different speeds, at the crucial moment: when the detergent enters the clothes, the drum spins in such a way as to prevent uneven distribution, then the speed increases for washing and rinsing, to provide maximum cleaning action. Thanks to this special system, washing efficiency is increased by 60% and the most resistant stains are eliminated, all WITHOUT INCREASING THE DURATION OF THE PROGRAM.

It is active only for cotton programs.

### **C2 aquaplus (sensitive key)**

Thanks to the new SENSOR ACTIVA SYSTEM, by pressing the key it is possible to run a special washing cycle applicable to all programs and types of fabric, caring for their fibres and the delicate skin of the users who use them.

Taking on much more water, together with the new combined action of drum rotation cycles and taking on and discharging water allow you to obtain perfectly clean, rinsed clothes. More water is used in the wash to dissolve the detergent completely, ensuring an effective washing action. The water in the rinses has also been increased to eliminate all trace of detergent in the fibres.

This function has been specifically studied for people with delicate, sensitive skin, who can suffer irritation or allergy from the slightest detergent residue.

It is also advisable to use this function for children's clothes and delicate fabrics in general, especially for washing bathrobes, whose fibres tend to retain detergent.

This option is not available for the wool program.

### **C3 easy iron key**

This function helps reduce creasing, depending on the programme selected and the type of fabric washed. This works as follows:

Mixed,Synthetics. Intermediate spins during rinses are eliminated, the final spin is a gentle spin.

Delicates. Intermediate spins during rinses are eliminated and the machine stops before the final spin, which is a gentle spin.

Hand wash, Woollens ,Mix&wash and Cotton. The machine stops before the final spin.

To complete the wash cycle in the Delicates , Hand wash , Mix&wash, Cotton, and Woollens programmes, press the Easy Iron key again: the machine will empty and perform the required spin.

Rinses. Intermediate spins during rinses are eliminated, the final spin is a gentle spin.

To empty machine of water with no spin, cancel the ongoing programme and select the Empty programme.

### **C4 degree of soiling**

By selecting this button (active only on COTTON and MIXED FIBRES programmes) there is a choice of 3 levels of wash intensity, depending on how much the fabrics are soiled.

Once the programme and wash temperature have been selected the degree of soiling indicator is automatically set to the minimum allowed; pressing the button increases the level and the settings for the cycle duration are also adjusted accordingly.

When a programme is selected the relevant indicator will light up to show the minimum possible degree of soiling.

Selecting a greater degree of soiling using the special button will cause the corresponding indicator to light up.

Note: The degree of soiling can vary automatically, depending on the temperature selected.

### **Express Fast**

By selecting this programme, and pressing the C4 button, it is possible to change the duration of the washing time and choose one of the 3 existing rapid programmes (14' - 30' - 44')

6.- Select spin speed if required (B1)

### **B1 spin speed**

Once the programme has been selected, the maximum spin speed allowed for that programme appears on the display. Pressing the spin button will reduce the speed by 100 rpm each time the button is pressed. The minimum speed allowed is 400 rpm, or it is possible to omit the spin by pressing the spin button repeatedly.

7.- To start the programme, once options have been chosen, press the key H. The washing machine will begin to operate. If you wish to cancel the option you have selected, press the key again. (The pilot light will go off.)

## **B2 delay start button**

This button allows you to pre-programme the wash cycle to delay the start of the cycle for up to 24 hours.

To delay the start use the following procedure:

Set the required programme.

Press the button once to activate it (h00 appears on the display) and then press it again to set a 1 hour delay (h01 appears on the display); the pre-set delay increases by 1 hour each time the button is pressed, until h24 appears on the display, at which point pressing the button again will reset the delay start to zero.

Confirm by pressing the "START/PAUSE" button (the light on the display starts to flash). The countdown will begin and when it has finished the programme will start automatically.

It is possible to cancel the delay start by taking the following action:

Press and hold the button for 5 seconds until the display will show the settings for the programme selected.

At this stage it is possible to start the programme previously selected by pressing the "START/PAUSE" button or to cancel the process by setting the selector to the (OFF) position and then selecting another programme.

## **Calculation of programme time – duration of the cycle (V)**

When selecting a programme, the duration of the cycle will be automatically displayed, this can vary according to the options selected.

In the first 4 minutes of the washing cycle, with the cottons and mixed synthetics programmes, the washing machine calculates the programme times taking in account the amount of clothing placed in the drum (pilot lamp I "kg.detector" lit) During this period the display pilot lamps will spin, displaying every 5 seconds the max. time of the programme times. After the first 4 minutes the duration of the cycle will be displayed, and which will be constantly updated until the end of the programme.

## **Door Lock Lamp - the light indicating the start of the programme (G)**

It lights up after pressing the START key.

After having pressed the START/PAUSE key, the lamp will initially flash, then, remaining fixed until the end of the washing.

Two (2) minutes having lapsed after the end of the wash, the light will go out to indicate that it is now possible to open the door.

## **Cancel-change programs**

Once you have started a program, and wish to change or cancel it, you should proceed in the following manner,

- Put the program selector in the (OFF) position. At that instant, you have cancelled the program and can if you wish to do so, select a new one.
- Select the new program.
- Click the key (H) again.

The washing machine will perform the new selected program.

## **Programme pause**

It is possible to momentarily stop the wash programme so that more washing can be added, and to do so, proceed as follows:

- Hold down the (H) key until the option key pilot lamps begin to flash and the time remaining indicator display V lights up.
- When the Door Lock lamp goes out (after approx. 2 minutes), open the door and add the desired washing.
- Correctly close the doors of the drum and the outer cover.
- Press the key H, and the washing machine will continue with the programme.

When the programme has been completed, the message "END" will appear in the indicator display,

Wait until the Door Lock lamp (G) goes out (after approx. 2 minutes)

**"To remove the washing, set the programme selector to the (OFF) position", before opening the washing-machine lid and the drum doors.**